


APN Setup Guide


for Android 6.0 Marshmallow

STEP 1

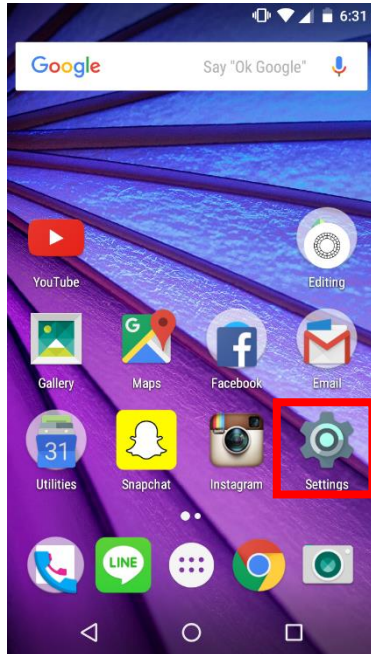


Open "Settings"

STEP 2

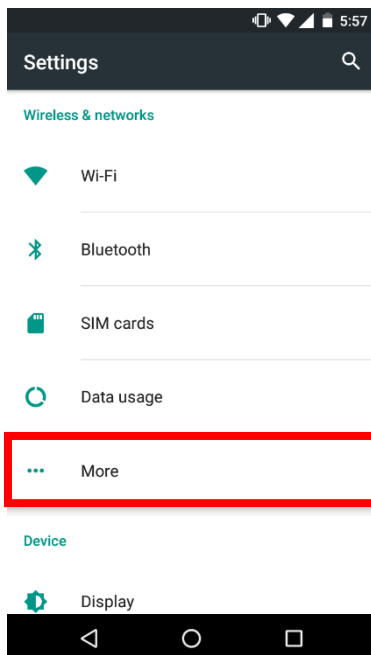


Under "Wireless & Networks" select "More"

STEP
3

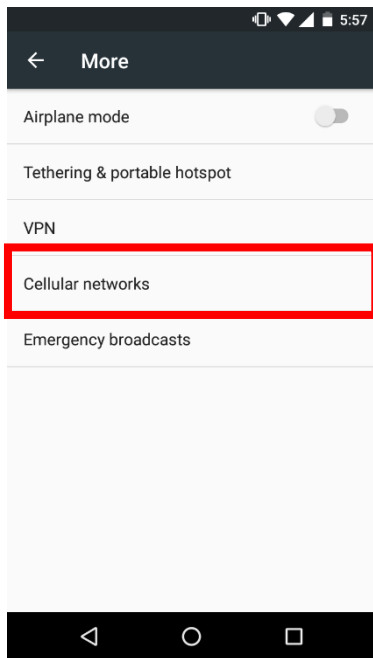


Select "Cellular Networks"

STEP
4

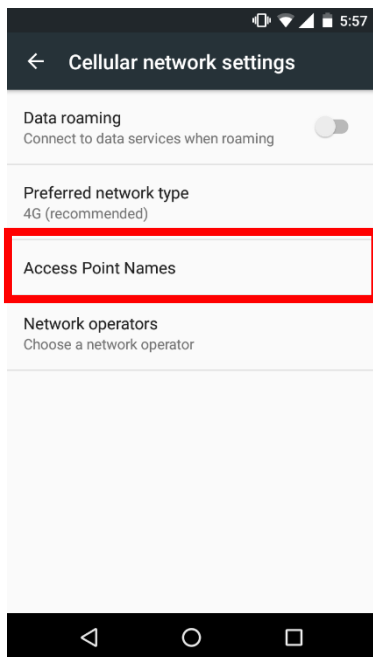


Select "Access Point Names"

STEP
5

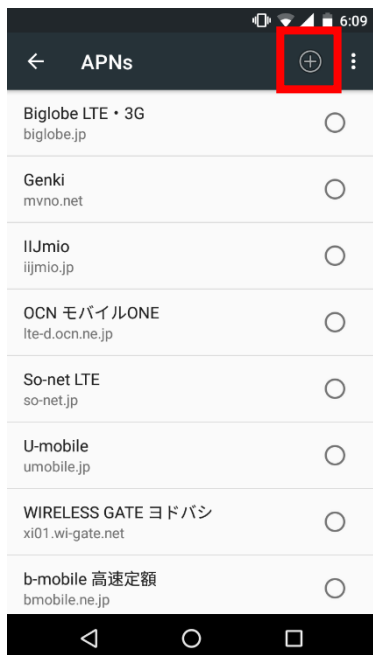

Select ⊕ to create new APN

STEP
6

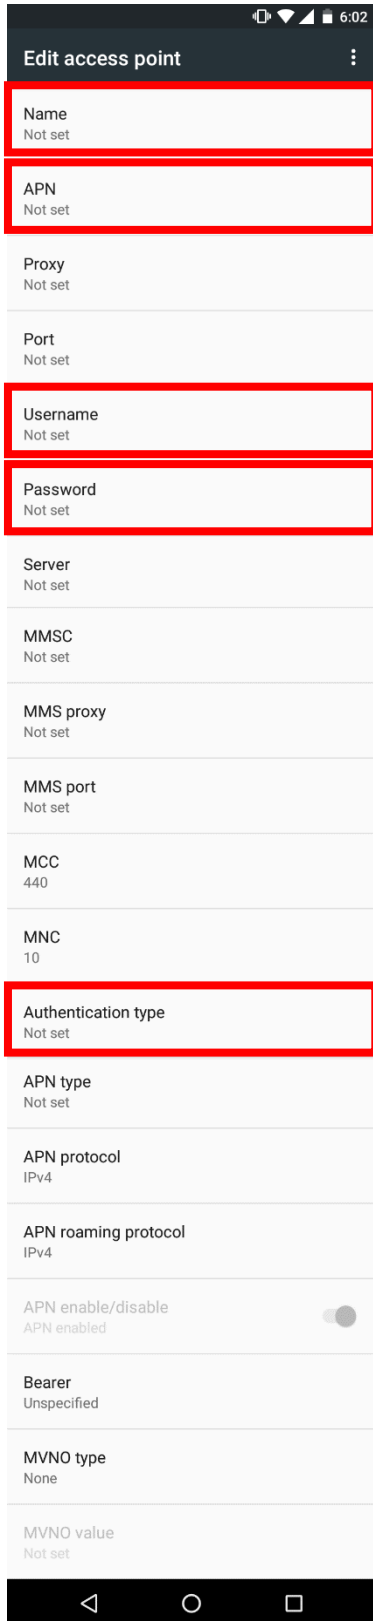

Edit APN as below:

Name...

Genki

APN...

mvno.net

Username...

genki

Password...


genki

Authentication type...

PAP or CHAP


Keep others as default

STEP 7

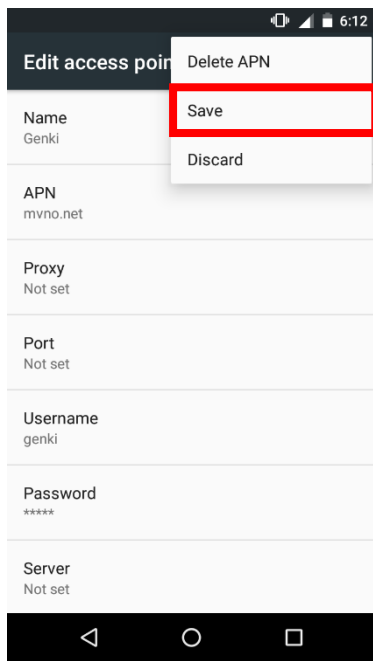

Pull down menu from top right and “Save”

STEP 8

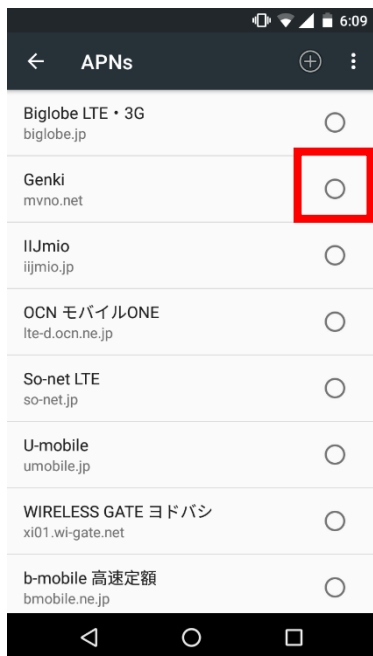

Select “Genki” to apply settings